



Xerox D110 Printer Setup


- Go to Print Driver Properties
- Select Printing Preferences

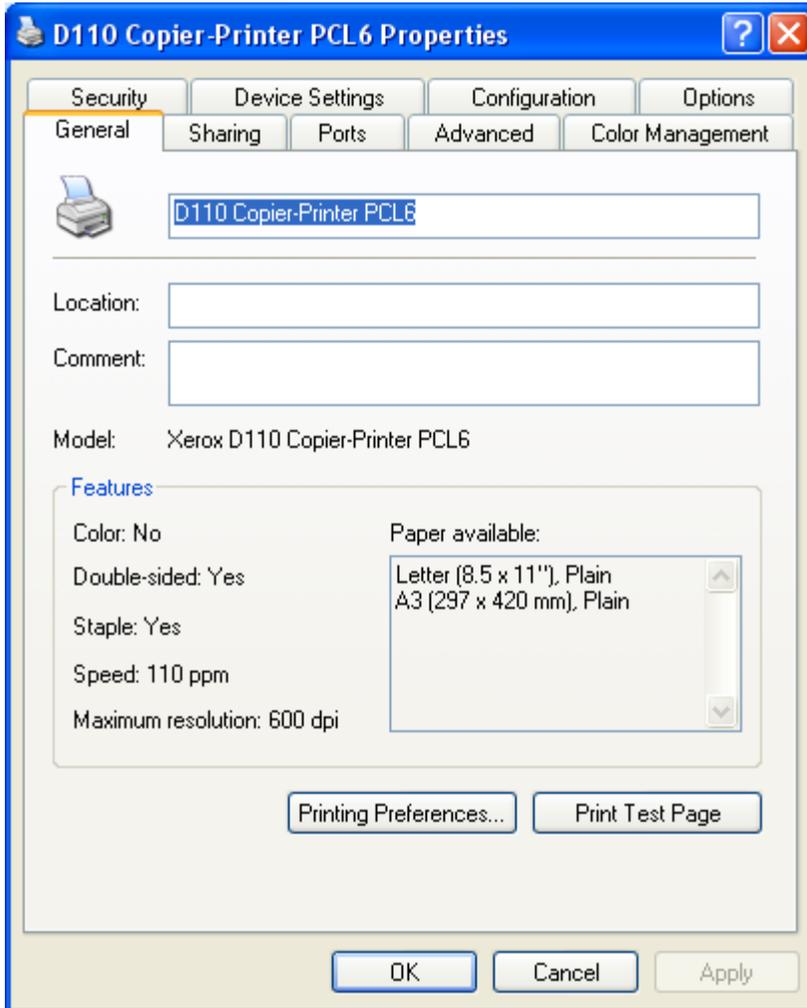


- Select “Secure Print” under Job Type

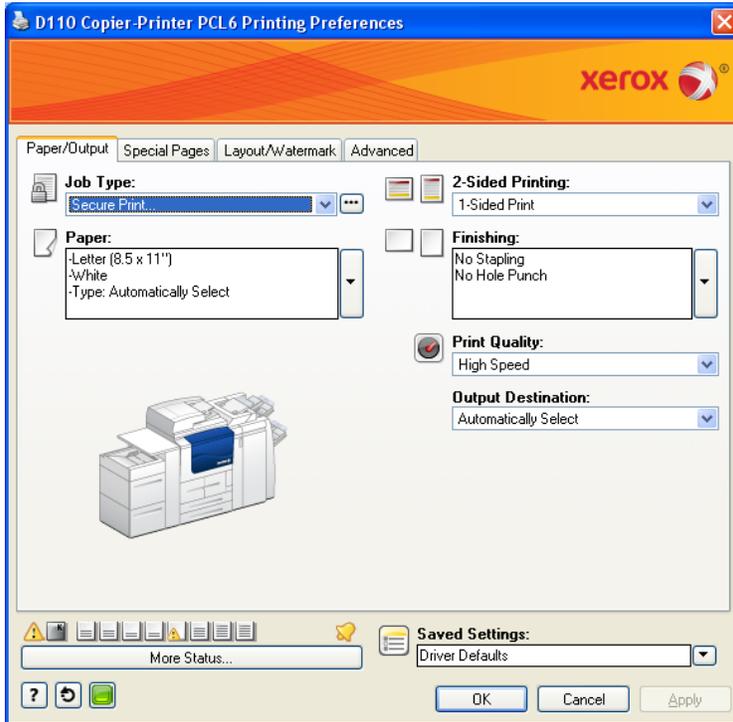


- Select the three dots next to the “Secure Print” Option
- Enter in the Users Passcode and confirm Passcode again
- Select OK to close the window and OK again at the Preferences window

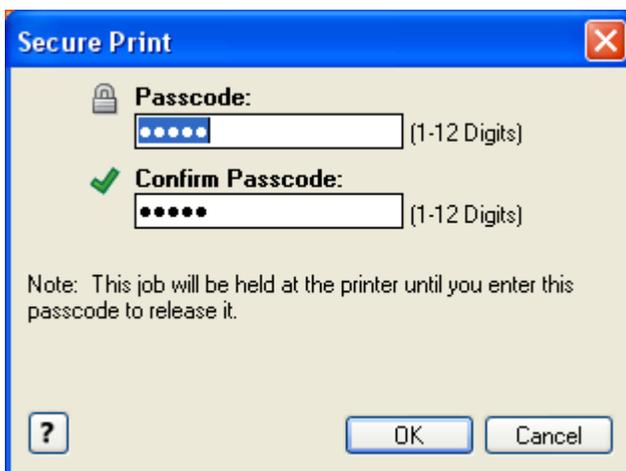


- At the printer properties tab, select the Configuration Tab

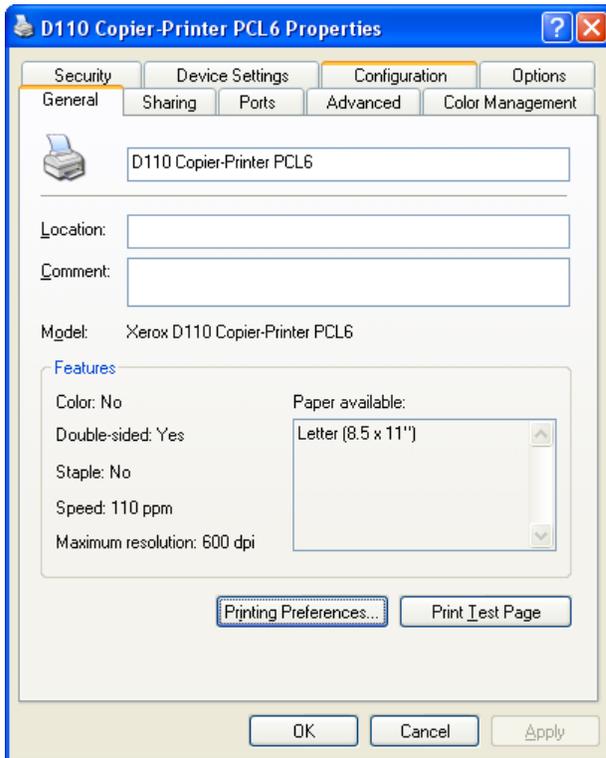


- Select the “Bi-Directional Setup” option

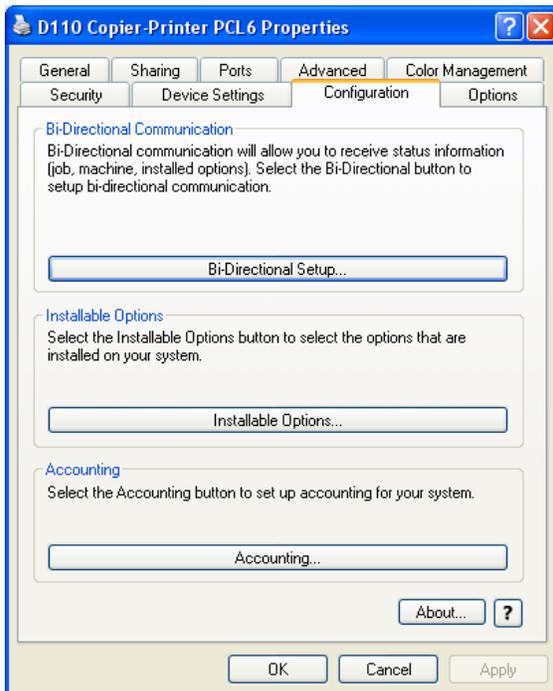


- Select the options below and select “OK”

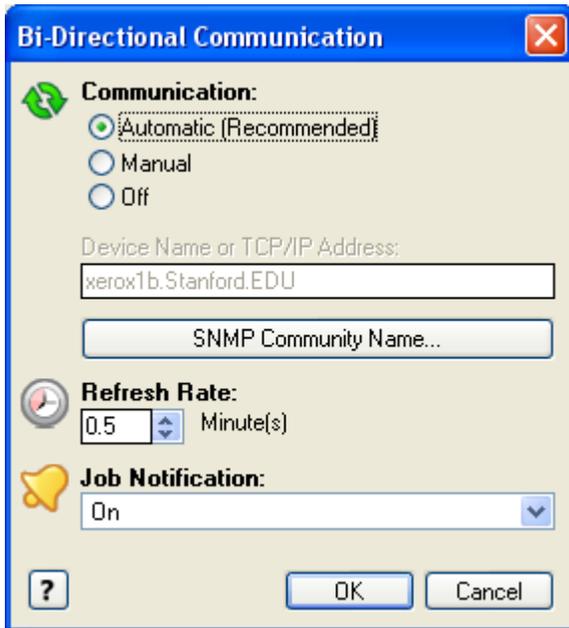

- At the Accounting option screen

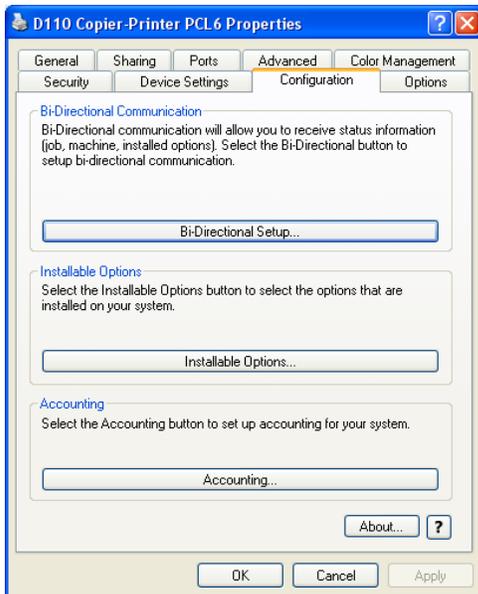

- Select the options below:
- Enter the users Default User ID: in the slot
- Leave all other fields blank
- Select “OK” to close window
- Select “OK” to close Properties window

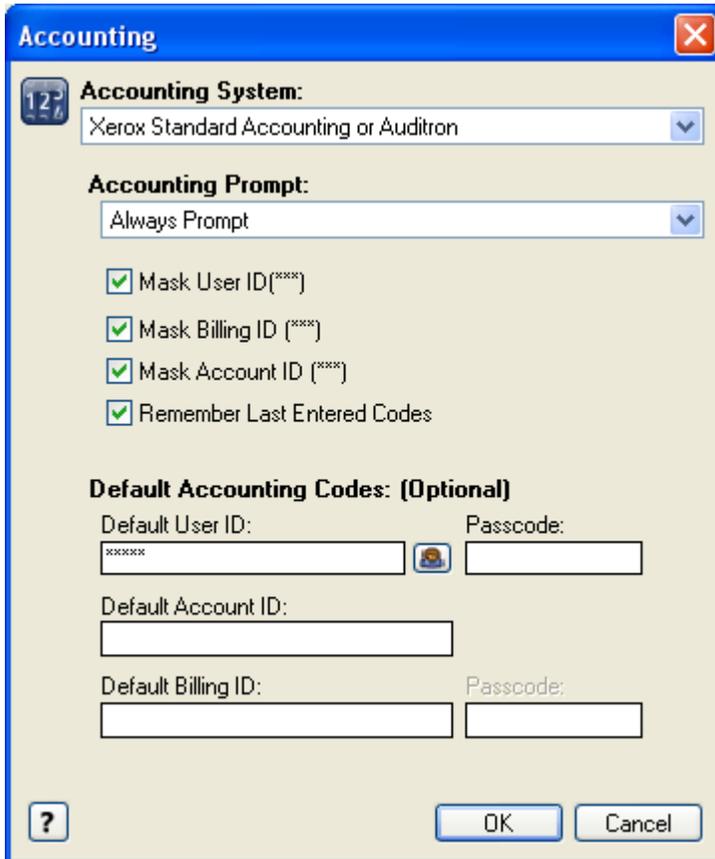

The image shows a dialog box titled "Accounting" with a blue title bar and a close button (X) in the top right corner. The dialog box has a light beige background and contains the following elements:

- Accounting System:** A dropdown menu showing "Xerox Standard Accounting or Auditron".
- Accounting Prompt:** A dropdown menu showing "Always Prompt".
- Four checked checkboxes:
 - Mask User ID(****)
 - Mask Billing ID (****)
 - Mask Account ID (****)
 - Remember Last Entered Codes
- Default Accounting Codes: (Optional)**
 - Default User ID:** A text field containing "*****" and a small icon to its right.
 - Passcode:** An empty text field.
 - Default Account ID:** An empty text field.
 - Default Billing ID:** An empty text field.
 - Passcode:** An empty text field.
- At the bottom left, a question mark icon in a square box.
- At the bottom right, two buttons: "OK" and "Cancel".